
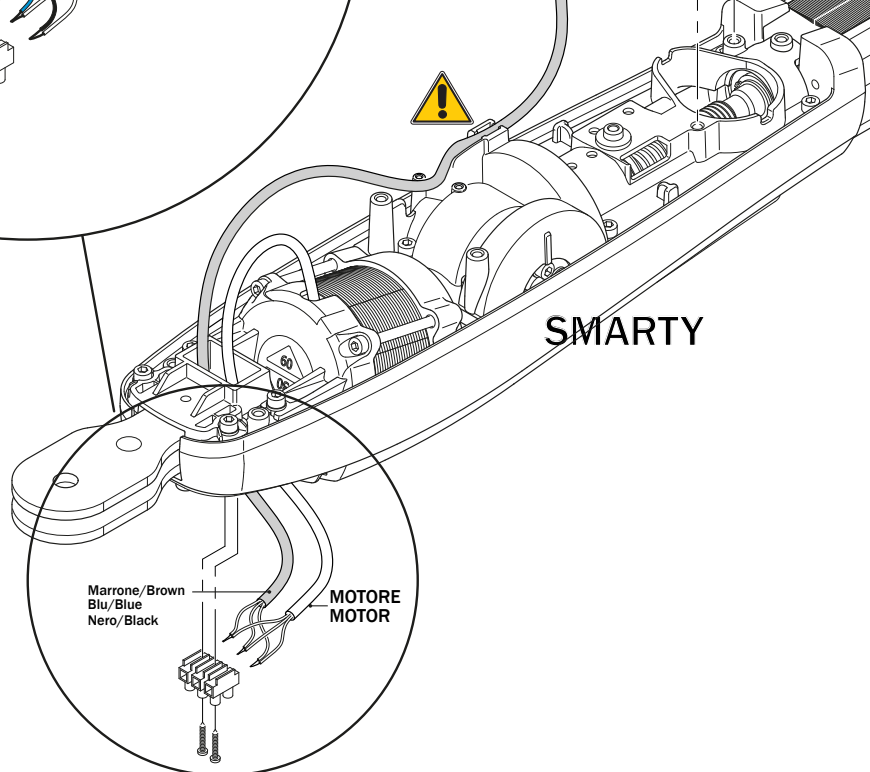
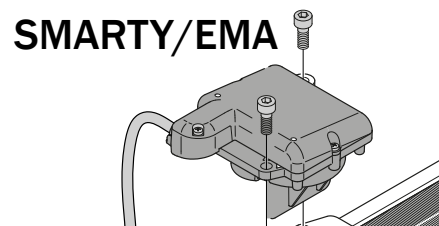
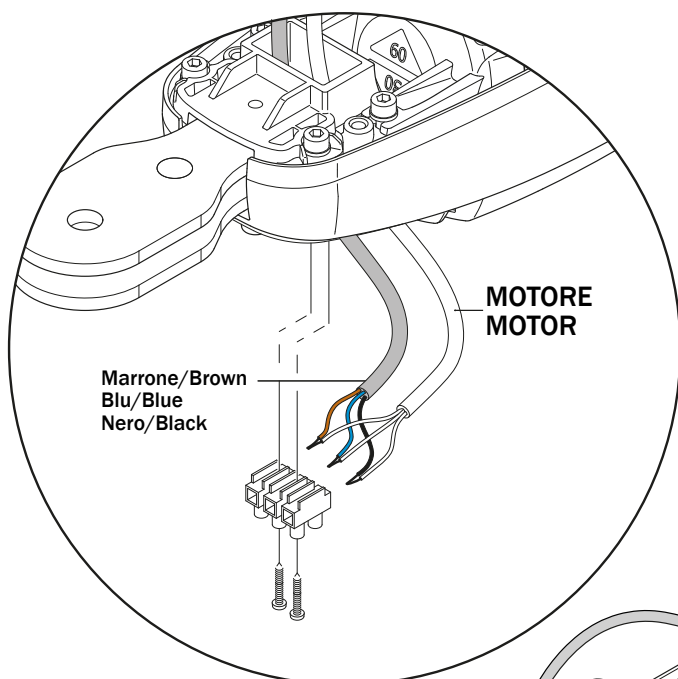
 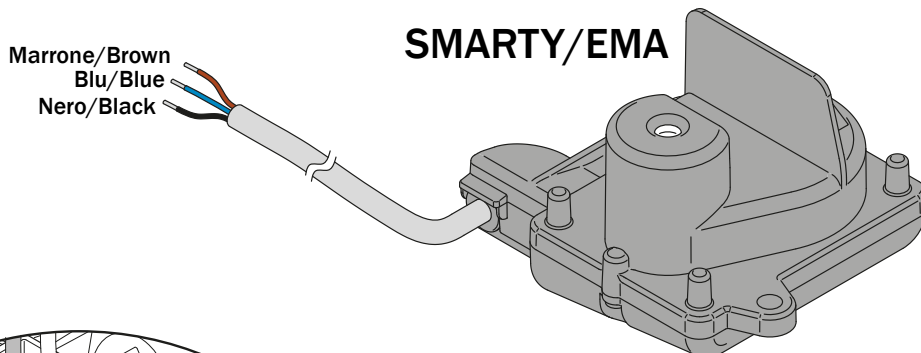




- IT** Collegare in parallelo alle fasi motore.
- EN** Connected in parallel with the motor phases.
- DE** Schaltet Sie mit den Motorphasen parallel.
- FR** Connecter en parallèle aux phases du moteur.
- ES** Conectar en paralelo a las fases del motor.
- PT** Ligar em paralelo às fases do motor.